
INSTRUCTION MANUAL
**AEROBASE 3 &
AEROBASE 3 PRO**



Aerobase 3



Aerobase 3 Pro

AEROBASE 3 & AEROBASE 3 PRO

AIR SHELTER



KEY TIPS



WITHOUT DELUXE WALL



WITH DELUXE WALL



Before inflating your shelter, start by pegging each corner so that all webbing straps are taught and the shelter sits square.



The Deluxe Wall panels can be opened to create doorways and help retain privacy. Unzip the wall panels 1/3rd and roll towards the toggles then fasten.



Ensure your air tubes are inflated to the correct pressure by using the gauge on the pump.



If you experience heavy rain or morning dew, flick the inside of the Deluxe Wall a few times to remove water from the mesh panel before opening the cover.



If you experience loss in air pressure, check the valve is firmly screwed in, is not cross-threaded and the valve cap is tight. Also make sure the valve flap is not obstructed.



Before deflating, connect the black webbing straps to the air tubes to make the next set-up easier.




Do not over tension guy ropes, the guy ropes should be taught but shouldn't pull your shelter out of shape.




Always dry your shelter before storing away. Mould can start to form within days if left wet in the bag.

- External Dimensions
- Door Width
- Mesh Vent
- Lantern Hanging Point

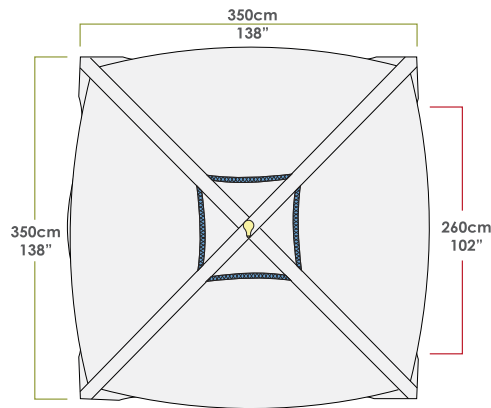


AEROBASE 3 DELUXE WALLS

Additional zip-on walls for the Aerobase Shelter. Use another single wall for additional shade, as a windbreak or add multiple walls to fully enclose your shelter.

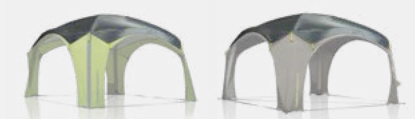

AEROBASE 3 ROOF COVER

Helps reduce internal temperature and keeps the inside of your shelter darker. Also protects your roof from pollen, tree sap and other debris.

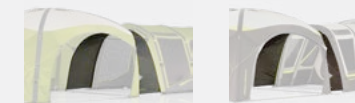

LINKS AND CONNECTORS

Link your shelter to your tent for the ultimate palatial set-up or connect two shelters to create one large covered space.



AEROBASE 3 MESH GROUND SHEET

Designed to fit perfectly inside your shelter. Made from woven PE duramesh for drainage with corner grommets to keep the floor secure.



OPTIONAL ADDONS

PITCHING INSTRUCTIONS

1. Test Run

Practice pitching your shelter at home to ensure you understand the process.


2. Pick A Site

When picking a site for your shelter, try to find an area that is sheltered, flat and free from sharp objects. Try not to pitch your shelter under trees as falling branches and sap can damage the shelter.

3. Unpacking

When you take your shelter out for the first time, take a moment to see how it is packed or take a photo on your phone. This will help you when it comes to packing your shelter away. Separate and identify the different parts. The package should include the following:

- Shelter
- Zip-on Deluxe Wall
- 4 x fiberglass brow poles
- Pump (built-in pressure gauge)
- Hose (with 2 nozzles)
- 4 x Sand Pegs
- 18 x Dome Pegs 6mm
- Guy Ropes (pre-attached)
- Repair kit (see peg bag)

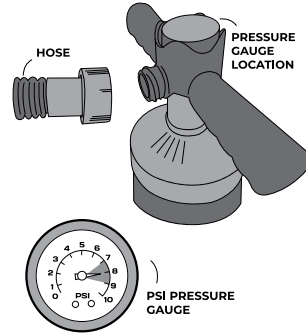

4. Pole Setup


Assemble the 4 fiberglass poles. The sections are joined together with shock cord, so they just need slotting together. Ensure that the poles do not snap together. It is important that the poles are fully inserted into the ferrules. If not connected correctly, they can cause damage when tensioned.

5. Pump Setup

Your Zempire® pump included with your shelter comes with a pressure gauge to ensure that the air tubes are inflated to the correct level. Assemble the pump's hose as pictured.


6. Layout

Unroll the shelter and ensure that all webbing guide straps are connected to the plastic "D" rings in each corner. There should be 5 webbing straps in total, one for each side of the shelter and one additional length running diagonally across the center. Peg each corner (●) so that all webbing straps are taught and the shelter sits square. It is important that the shelter is not skewed, as this will make attaching the walls difficult and could affect stability. Ideally the pegs should be angled away from your tent at 45°.

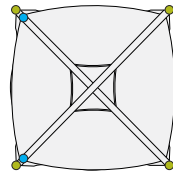

7. Boston Valve

The external inflation valves (x2) are located under the rain socks on two corners (●) of the shelter. Before inflating, remove the valve caps (A) and screw the boston valves (B) into the threaded section attached to the tubes. It is important that the valves are not cross threaded and are firmly tightened. Make sure no fabric is stuck in the valves, as this will cause air to leak.

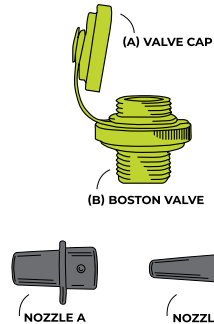

8. Inflation

Connect the pump via **NOZZLE A** to one of the boston valves and inflate to 7-9 PSI. It is important not to over-inflate the tubes. It is recommended that during very hot weather, 7 PSI is used to provide room for expansion during the day. In cooler or windier conditions, 9 PSI is recommended.

As the tube inflates, it may be necessary to support the center of the shelter until it assumes its correct shape.

9. Brow Poles

Insert the end of one fiberglass pole into the small black webbing pocket found halfway up the side of each entrance. Allow the pole to bow downwards and insert the other end of the pole into the pocket on the opposite side of the shelter. Lift the pole upwards so that it aligns with the seam above the entrance. Secure the pole using the velcro tabs. Repeat with the 3 remaining poles.

Note that the poles should cross over one another as pictured.



10. Pegging

Peg the remaining peg loops on either side of each entrance. The wall panels should sit at right angles to each other following the line of the webbing guide straps. Durable steel pegs are included with your shelter, which will be suitable for the majority of conditions. However, if you are in a rocky or loose sandy location it may pay to purchase more specialized pegs. A range of specialised Zempire® Pegs may be available in your local region or on our website.

11. Webbing Straps

Now that the shelter is fully erected, the webbing guide straps can be detached from one end and folded into the mesh pocket found at the sewn end. This prevents them from becoming a tripping hazard. The straps are not completely detachable to ensure they do not get misplaced. It is important to reconnect these webbing straps before deflating your shelter.

12. Anchor Guy Ropes


The anchor guy ropes attached at each corner should be used at all times. It is important not to over-tighten the guy ropes. They should sit taught but should not distort the shape of the shelter. 4 yellow sand pegs are included with your shelter and can be used for the anchor guys in softer or sandy ground.

13. Zip-on Deluxe Wall

Your shelter includes one zip-on Deluxe Wall. When attaching the wall, it may be necessary to re-peg the corners to ensure the wall is not over tensioned. Too much tension can damage the zips. It may also be helpful to leave the wall attached when packing the shelter to ensure the correct tension is applied when setting up next time. The wall zipper has twin zip pullers to allow either side of the wall to be rolled back as a door.

14. Deflation

- Remove the fiberglass brow poles from each side of the shelter and place them in the pole bag.
- Unpeg all guy ropes and roll up to ensure they do not get tangled during packing.
- Unpeg the peg points, excluding the four corners. Clean and dry the pegs before storing them in the supplied peg bag.
- Unscrew both boston valves (●) on the airframe (this may be quite loud). Wait for all the air to be expelled.
- Unpeg the four corners of the shelter, clean and pack the pegs.
- Turn the shelter upside down, and fold the shelter following the steps below.
- Working the air out of the folded legs after Step 1. Place the pump and poles on the folded shelter before rolling (Step 4):

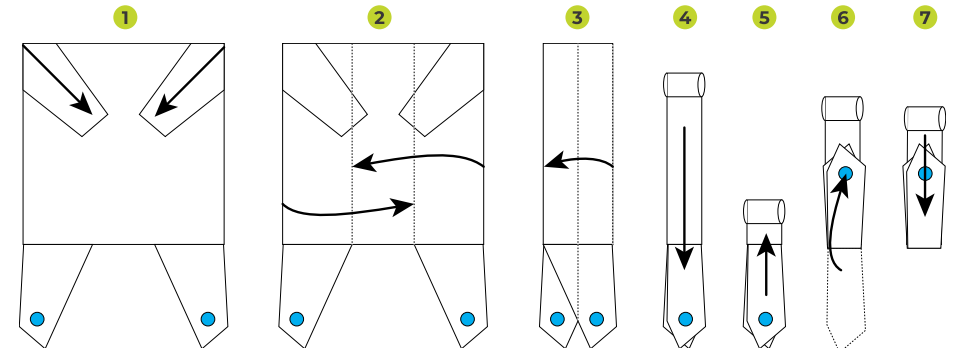

- Use the supplied webbing straps (x2) to secure the rolled shelter and tension it so that it is firmly packed.
- Place the rolled shelter in carry bag, zip closed and tension the compression straps.

For a detailed description of all the features and specifications please visit our website.

UV Degradation

Shelter fabrics can be weakened by prolonged exposure to sunlight. Under normal holiday use, your Zempire® Shelter will give you many years of camping enjoyment. However, extended use in strong sunlight will cause degradation. It is recommended that during periods of strong sunlight a Zempire® Roof Cover is used to help protect from UV damage. UV degradation is not covered under warranty. The warranty does not cover permanent sites, displays or commercial use.

CARE INSTRUCTIONS

1. Ensure guy ropes are out at all times during use.
2. Never pack your shelter away wet. If you must take your shelter down when wet, ensure that it is dried completely as soon as possible to prevent mildew forming.
3. If mildew does form on your shelter, wash off with warm water and a soft brush to prevent further growth. Do not use soap or detergents.
4. Do not use aerosol spray cans or an open flame inside your shelter.
5. Always use a peg puller or spare peg to remove pegs. Never remove pegs by pulling the shelter or peg loops; always clean and dry pegs before storing.
6. This shelter is not designed to withstand storm conditions. During a severe storm, it is recommended that the shelter be taken down.
7. Do not leave your shelter pitched unnecessarily for extended periods of time. UV light damages the fly and will shorten the life of your shelter.

NEED HELP WITH YOUR TENT?

We have a range of videos on our website which can help you.

Follow the QR code or type the link below in your browser. We suggest to check out our videos beforehand in case you don't have service at your holiday destination.

TO THE
VIDEO
GALLERY



ZEMPIRECAMPING.INFO/VIDEO-GALLERY

2 Year Limited Warranty

Please take time to read about the protection we offer you.

All our products come with a guarantee designed to protect you as our valued customer. Zempire® Camping Equipment will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 2 years from the date of purchase.

The Guarantee is subject to the following conditions:

1. The Guarantee only applies to an original purchaser who purchased this product in an unopened condition from an approved retail outlet.
2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Zempire® Camping Equipment), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, damage from wind, insects, animals or mold/mildew, or any other cause reasonably beyond the control of Zempire® Camping Equipment are not covered.
4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
5. All transport costs and any other indirect costs are excluded from the Guarantee.
6. Zempire® Camping Equipment reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.
7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Zempire® Camping Equipment:
 - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
 - b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Zempire® Camping Equipment's option).

Australia Only

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

USA Only

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Europe Only

The consumer has legal rights under applicable national legislation governing the sale of consumer goods and those rights are not affected by the guarantee.

All warranty claim processes are explained on our Zempire® website [/warranty](#) and follow the instructions to lodge a warranty claim.

Sales Offices:

New Zealand & Australia

Zempire® Camping Equipment
6 Karewa Place, Pukete,
Hamilton, 3200, New Zealand
Ph: +64 7 848 1610

USA & Canada

Zempire® USA INC.
22525 SE 64th Place, Suite 200
Issaquah, WA, 98027
Ph: +1 206 420 0391

Designed and tested in New Zealand. Made with care in China.

⚠ WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

zempire®
CAMPING EQUIPMENT



@zempirecamping #zempirefamily

i INFO

Please read this instruction manual carefully and follow all instructions, guidelines, and safety warnings.

Included in this product instruction manual are warnings and precautions in relation to the safe use, care, assembly, maintenance, and storage of this product. By using the product, you confirm that you have read the product instruction manual and understand all warnings and precautions and agree that the product shall only be used for the intended purpose and application in accordance with the instructions, guidelines, and warnings in this product instruction manual as well as in accordance with all applicable laws and regulations. A failure to read, understand and follow the instructions and warnings may result in death or injury to yourself and others as well as damage to your product.

This manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates.

These instructions MUST be kept with this product for future reference.

WARNING & SAFETY REFERENCE EXPLANATIONS

⚠ DANGER! – Safety instruction: Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

⚠ WARNING! – Safety instruction: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

⚠ CAUTION! – Safety instruction: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

ⓘ NOTICE! – Indicates a situation that, if not avoided, can result in property damage.

ⓘ NOTE! – Supplementary information for using the product.

⚠ DANGER

Failure to obey this instruction will cause death or serious injury.
HAZARD OF CARBON MONOXIDE POISONING



Never use fuel-burning appliances such as barbecues, gas heaters or gas cookers inside the tent/shelter. The burning process produces carbon monoxide which accumulates inside the tent/shelter and can cause death.

⚠ WARNING

Failure to obey these warnings could result in death or serious injury.
FIRE HAZARD

Do not cook inside the tent/shelter or use open flames.

⚠ WARNING

Failure to obey these warnings could result in death or serious injury.
BEWARE OF SUFFOCATION

Make sure ventilation openings are always open to avoid suffocation.

⚠ CAUTION

Failure to obey these cautions could result in minor or moderate injury.
INJURY RISK

This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and suitable knowledge, unless they have been given supervision or instruction by a person responsible for their safety.

Guy lines are a trip hazard, do not allow children to play near the tent and ensure that suitable protective footwear is worn.

Maintenance or cleaning of this tent/shelter is not to be undertaken by unsupervised children.

⚠ DANGER

Failure to obey this instruction will cause death or serious injury. **ELECTRIC SHOCK AND/OR ELECTROCUTION HAZARD**

- The use of the Power cord access points to run an extension cord into the tent/shelter may lead to electric shock, electrocution, fire or explosion hazards.
- **DO NOT** use any extension cord that is worn or damaged in anyway.
- **DO NOT** allow electrical devices, appliances, or extension cord to encounter condensation, water, or moisture inside the tent/shelter.
- Only use extension cords that are marked and certified for **OUTDOOR USE**.
- **USA:** Only connect extension cord to a 120 Volt GFCI (ground fault circuit interrupter) protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI built in protection.
- **AU/NZ:** Only connect extension cord to a 240 Volt RCD (residual current device) protected outlet with proper ground. If RCD outlet is not available, use an extension cord with RCD built in protection.
- Ensure that the extension cord outside the tent/shelter is lower than the Power Cord entry into the tent so moisture will not travel along the cord and into the tent/shelter.
- Follow all instructions, warnings, and safety precautions from the manufacturer of the extension cord.
- Store tent/shelter and extension cord separately.

⚠ CAUTION

RISK OF INJURY AND MATERIAL DAMAGE

- Never open the zip on the protective sleeve around an air pole while the pole is inflated. This will result in the air pole bursting.
- Only inflate the air poles to the recommended pressure using the supplied (or Zempire recommended) pump.

i INTENDED USE

This product is suitable for:
Light to moderate weather and family camping.

This product is NOT suitable for: Use above the snowline or in severe winds, commercial use, or long-term pitching.

This product is suitable only for the intended purpose and application in accordance with these instructions. This manual provides information that is necessary for proper and correct use of the product.

Improper use or maintenance will result in diminished performance and potential failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or usage.
- Incorrect maintenance or use of spare parts other than original spare parts recommended and supplied by the manufacturer.
- Alteration to the product without express permission from the manufacturer.
- Use for purposes other than those described in this manual.

Zempire® reserves the right to change product appearance and product specifications.

i NOTICE

MATERIAL DAMAGE

- During setup **DO NOT** open or close the zippers by force.
- During packdown **DO NOT** use force when dismantling the tent/shelter. Otherwise, you might damage fabric and other components.

CLEANING & MAINTENANCE: FABRIC DAMAGE

- **DO NOT** use sharp or hard objects or cleaning agents for cleaning.
- **DO NOT** use mineral-based, soaps, chemicals, or detergents for cleaning.
- Gently remove tree sap and bird droppings from the fabric as soon as possible to avoid permanent damage to the material.
- If necessary, clean the fabric with clean water and a soft bristled brush.

i STORAGE

Fully set up the tent/shelter for cleaning. Choose a sunny day for cleaning to ensure the material will dry thoroughly.

Clean the tent/shelter thoroughly, including the inside to be sure no food etc is left inside to attract rodents etc.

Air the tent/shelter fully and ensure the tent is totally dry before packing away.

Store in a well-ventilated dry place inside the supplied carry bag.

i DISPOSAL



Recycle all packaging material.

Do not discard into normal household garbage or landfill. Please contact local recycling facilities to recycle.